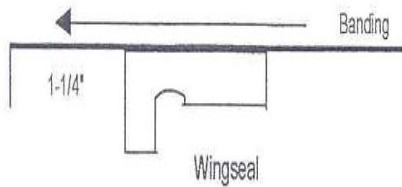
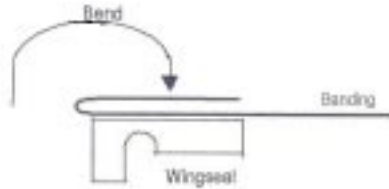


STEP 1

Cut your banding to the proper length. With the tips of the wingseal pointed down, thread the banding through the wingseal, extending the end about 1-1/4" inches past the seal.


STEP 2

Bend the end of the banding up 180 degrees over the wingseal so that it is flat.


STEP 3

Bend the seal back on the banding about 30 degrees.

Your Fabstrap is complete.

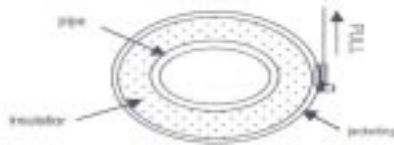STEP 4

Wrap the fabstrap around the jacketed insulation, with the wingseal tips pointing up. Thread the banding through the wingseal. Pull the banding tight with a banding tool.

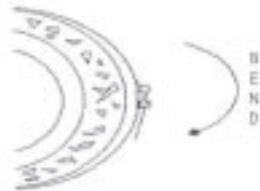STEP 5

After the banding is pulled tight, bend the banding at the wingseal, up and over 180 degrees.

STEP 6

Push the tips of the wingseal down, then lightly hit them with a hammer, to lock the fabstrap into place. Trim the excess banding or bend over the top.

